

HOME



ECONOMY

**HEATER
CONTROLLER**
-
**HORIZONTAL
VERTICAL**



H+HE_EN0920


INSTALLATION MANUAL&USER MANUAL


HEATER CONTROLLER H+h E



SAFETY:

1. **The heater should be installed by a qualified person.**
2. Bathroom radiators fitted with electric heaters should be fixed not less than 60 cm from a bath, shower or wash basin, and never above abath.
3. For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
5. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
6. **The heater MUST BE DISCONNECTED before cleaning the casing. AVOID SOAKING THE CASING.**
7. One radiator valve must always be open when a heater is in use (liquid thermal expansion).

CAUTION: To avoid the risk of fire or electric shock the heater should be protected from water spray or flooding. This appliance is not intended for use by persons (including children) of limited physical, sensory or mental abilities, or persons inexperienced or not familiar with the appliance, unless supervised or instructed on the appliance use by persons responsible for their safety. Particular attention should be paid to children, to preclude playing with the appliance by them. Exclamation mark on triangular field signals:  **information important for the user.**

CAUTION: electric shock hazard!, lightning mark ended with arrow on triangular field 

CAUTION: in order to reduce electric shock hazard, do not remove the casing (nor its rear cover). There are no user-serviceable parts inside the appliance; the product must be returned to the manufacturer for repair via the distributor who sold the product.

GUARANTEE TERMS:

Guarantee is granted by manufacturer for 24 months period starting from date of sale, but no longer than 36 months from date of the heater manufacture. Defects revealed within this period, resulting from a fault of manufacturer will be repaired free of charge or the item replaced with new, equivalent one. Term of complaints' investigation up to 14 (fourteen) days from date of submission to the manufacturer.

Guarantee does not cover:

1. Using of product in a manner noncompliant with attached instructions.
2. Any visible damage to the heating element or controller due to improper use. Damaging of manufacturer's seals makes the guarantee null and void.

In the event that Heatpol are unable to repair or replace this product we reserve the right to refund the purchase price as an alternative.

GUARANTEE CARD

Serial No.:

Date of sale:

Stamp of retail outlet, signature of seller




Mników 322, 32-084 Morawica, Poland
Tel/fax: +48 12 656 44 91


MADE IN EU

Caution: The guarantee card should be legibly filled in retail outlet. Any corrections on the guarantee card will invalidate the guarantee. Guarantee card valid only with proof of purchase.

1 Kit content

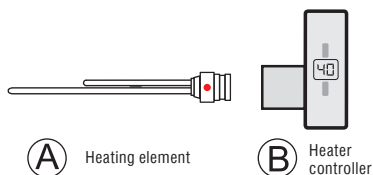

Side connection

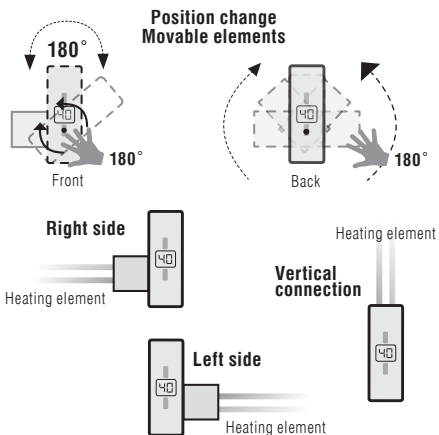


Mounting in radiators

CH system




 Electric radiators



The electric heater must have a safety valve


Installation details

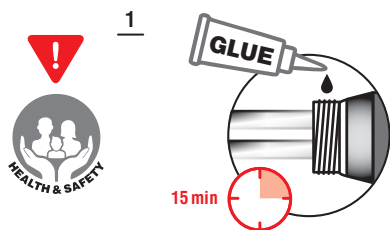


Before you apply the heating element, spread the Loctite glue (included in the set) on the middle of the thread circumference.

GLUE


 
2 The order of assembly of elements

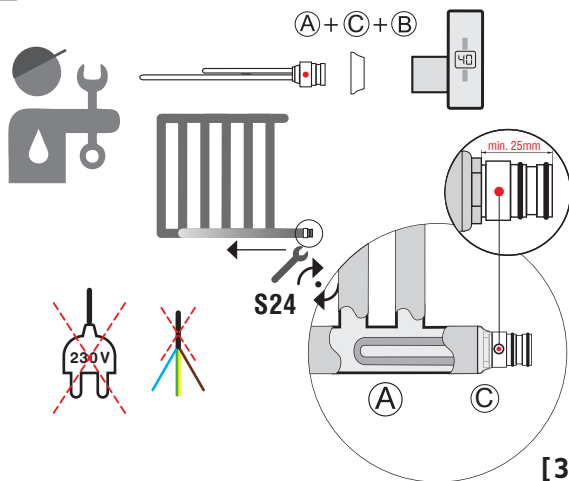





CAUTION! Do not disconnect heater controller when the system is powered.

The locking screw must be protected against accidental unscrewing eg. by applying a drop of lacquer or acrylic adhesive.

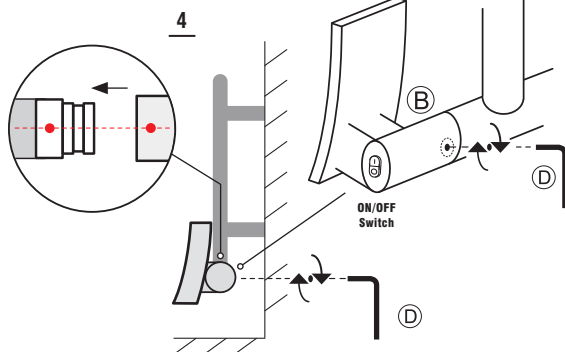
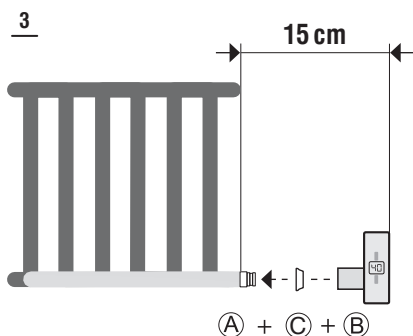


Electric radiators

CH system

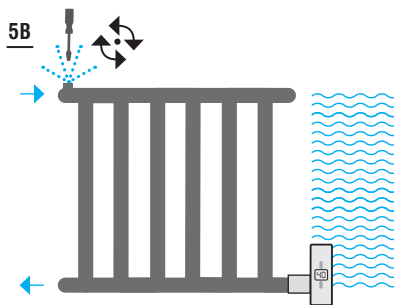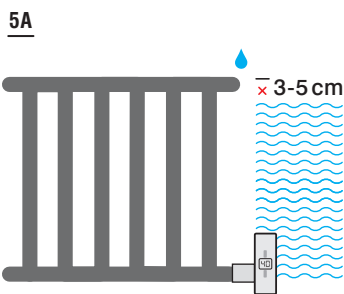


Before you apply the heating element, spread the Loctite glue (**included in the set**) on the middle of the thread circumference.

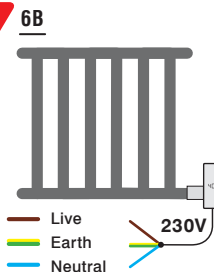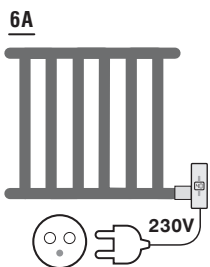


For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm

 7




After electric connection, turn on the switch


Mounting in radiators

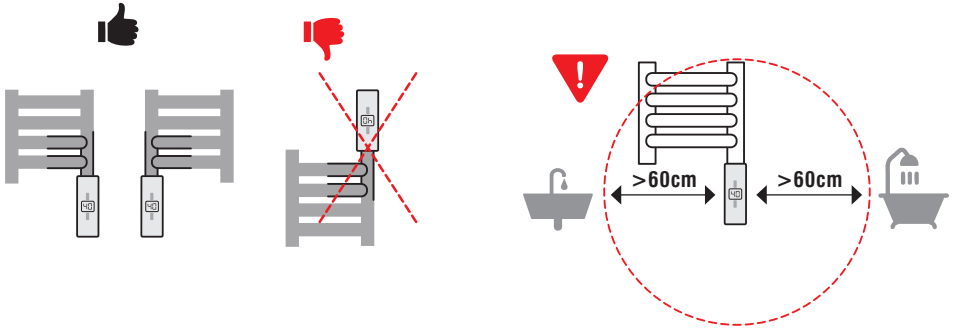


Installation options: CH system

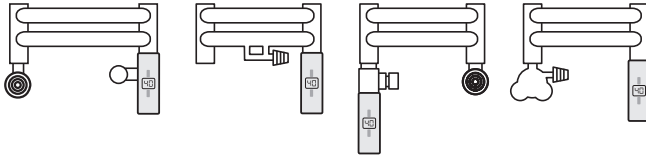

Installation options: electric radiator

 


Installation details

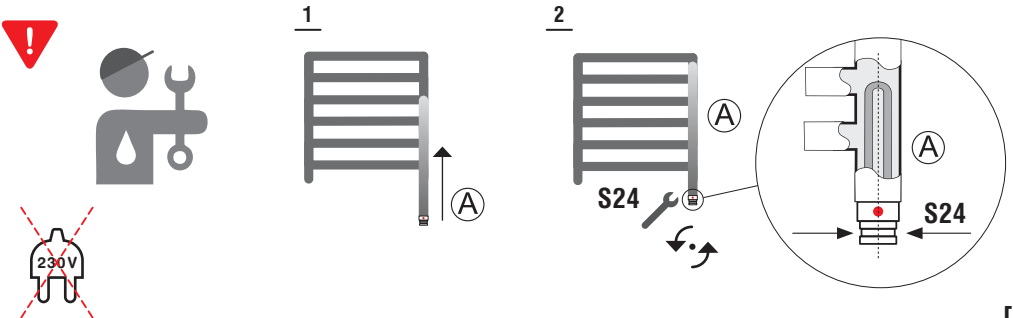



  **CAUTION!** Do not disconnect heater controller when the system is powered.

3

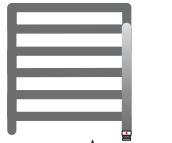

Recommendation:
Plug and turn front of the heater controller to vertical position



4

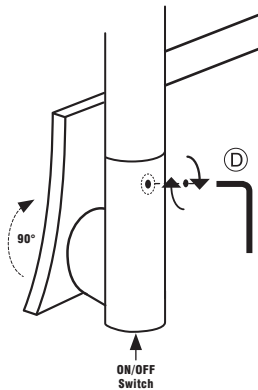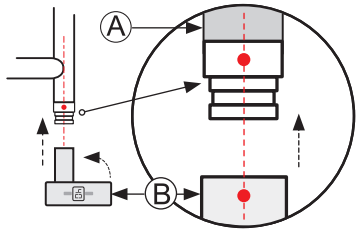

Electric radiators



5

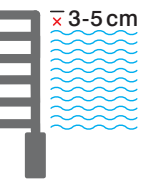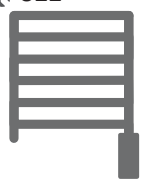


7




CH system

Finishing

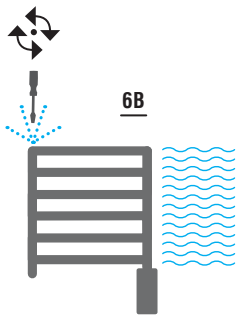

9A Hard wire connection

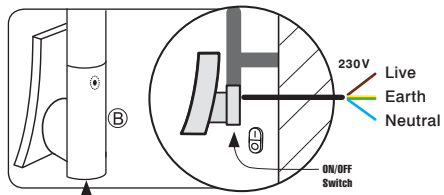


10 After electric connection, **TURN ON** the switch (concern only hard wire connection)



For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm

9B Connection with a coiled cable and a plug

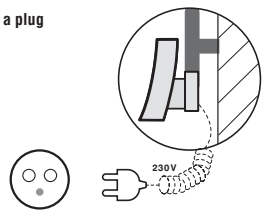

1




40°C
Standard heating temperature

10°C - 65°C
Select temperature

2

TURBO mode activation

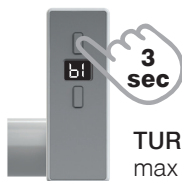

TURBO mode activation – max heating temperature
Hold button for 3 seconds



Max heating temperature
bl-b2-b3 Selection for 1/2/3 hours

bl Off selection

3

TIMER mode activation




1. Select temperature
2. Hold button “-” for 2 seconds
“t1” symbol will appear on the display
3. Using +/- buttons set the desired number of heater work hours (**1-9**)

After the programmed time expires, the heater will turn off

DO NOT DISCONNECT!

controller from heating element, when connected to the power supply

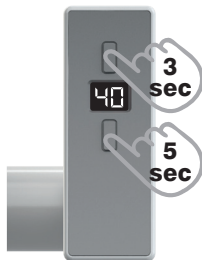


Run the controller

Hold upper button for 3 seconds

Switch off the controller

Hold lower button for 5 seconds

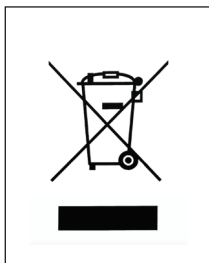

Mników 322, 32-084 Morawica, Polska
Tel/fax: +48 12 656 44 91

www.heatpol.pl
www.homeplus-system.com

MADE IN EU