

HOME



HEAT SYSTEM

HEATER
CONTROLLER
-
VERTICAL



+
REMOTE
CONTROLLER



IH+UK1712

GUIDE & USER MANUAL


HEATER CONTROLLER H+ | REMOTE CONTROLLER H+R




SAFETY:

1. **The heater should be installed by a qualified person.**
2. Bathroom radiators fitted with electric heaters should be fixed not less than 60 cm from a bath, shower or wash basin, and never above a bath.
3. For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
5. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
6. **The heater MUST BE DISCONNECTED before cleaning the casing. AVOID SOAKING THE CASING.**
7. One radiator valve must always be open when a heater is in use (liquid thermal expansion).

CAUTION: To avoid the risk of fire or electric shock the heater should be protected from water spray or flooding. This appliance is not intended for use by persons (including children) of limited physical, sensory or mental abilities, or persons inexperienced or not familiar with the appliance, unless supervised or instructed on the appliance use by persons responsible for their safety. Particular attention should be paid to children, to preclude playing with the appliance by them.

Exclamation mark on triangular field signals:  **information important for the user.**

CAUTION: electric shock hazard!, lightning mark ended with arrow on triangular field 

CAUTION: in order to reduce electric shock hazard, do not remove the casing (nor its rear cover). There are no user-serviceable parts inside the appliance; the product must be returned to the manufacturer for repair via the distributor who sold the product.

GUARANTEE TERMS:

Guarantee is granted by manufacturer for 24 months period starting from date of sale, but no longer than 36 months from date of the heater manufacture. Defects revealed within this period, resulting from a fault of manufacturer will be repaired free of charge or the item replaced with new, equivalent one. Term of complaints' investigation up to 14 (fourteen) days from date of submission to the manufacturer.

Guarantee does not cover:

1. Using of product in a manner noncompliant with attached instructions.
2. Any visible damage to the heating element or controller due to improper use.
Damaging of manufacturer's seals makes the guarantee null and void.

In the event that Heatpol are unable to repair or replace this product we reserve the right to refund the purchase price as an alternative.

GUARANTEE CARD

Serial No.:

Date of sale:

Stamp of retail outlet, signature of seller



Mników 322, 32-084 Morawica, Poland
Tel/fax: +48 12 656 44 91

MADE IN EU

Caution: The guarantee card should be legibly filled in retail outlet. Any corrections on the guarantee card will invalidate the guarantee. Guarantee card valid only with proof of purchase.


 
 
 


Watch video instruction for heater controller at:




www.homeplus-system.com

USER MANUAL: Heating element + Heater controller (vertical) H+

Kit content


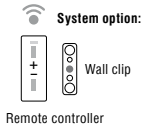





Mounting in radiators

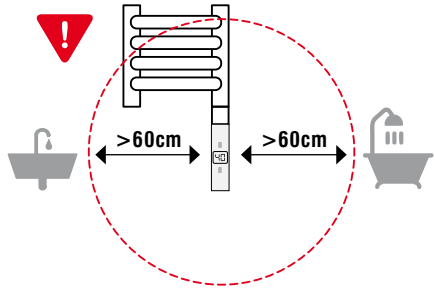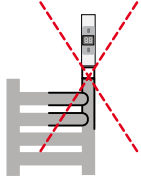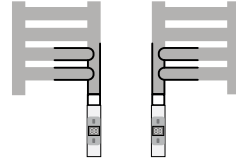

Installation options: CH system


Installation options:
electric radiator

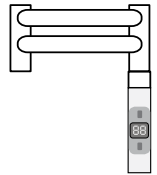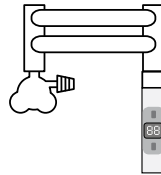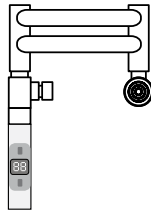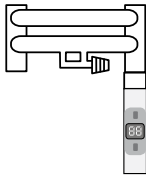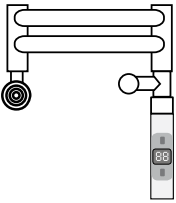


Installation details



1


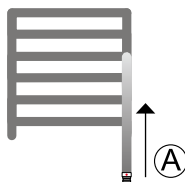


2

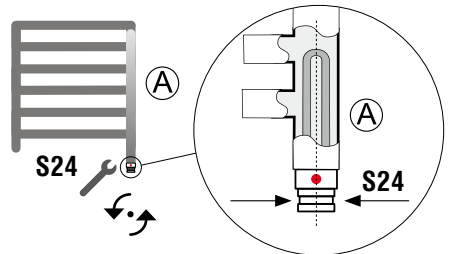


CAUTION! Do not disconnect heater controller when the system is powered.


3

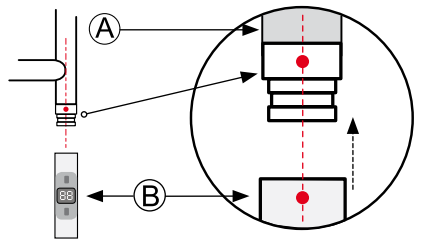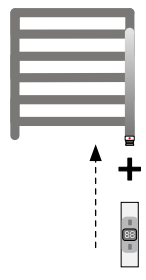


4

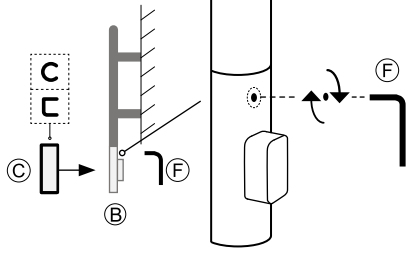


Electric radiators

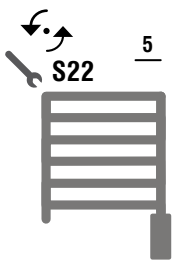

5

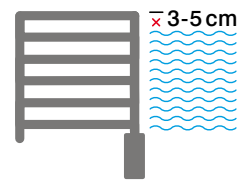

6A

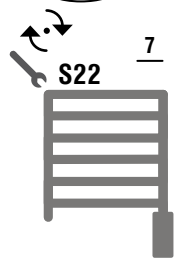


7

CH system

Finishing




6B


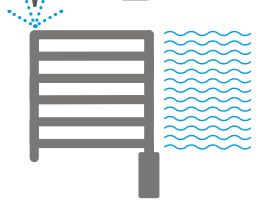


Element (D) must be cut the correct length


8

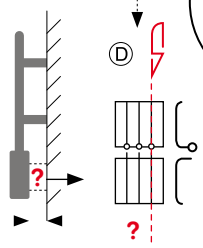


Cut to length

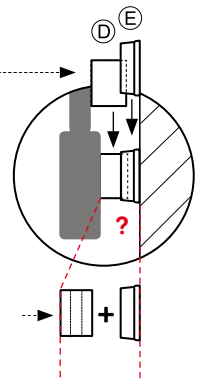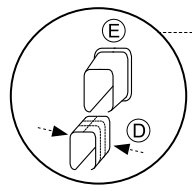

9A Connection with a coiled cable and a plug

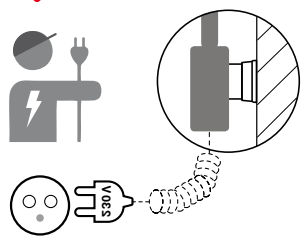


9B Hard wire connection

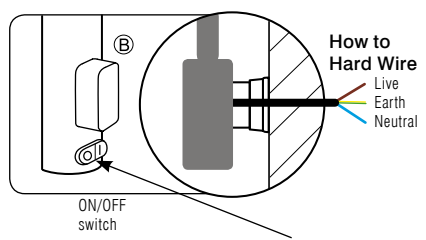


For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with 9 contact separation of at least 3 mm

 10 After electric connection please turn the switch ON



USER MANUAL: How to use heater controller (optional remote controller)

VIDEO available at www.homeplus-system.com

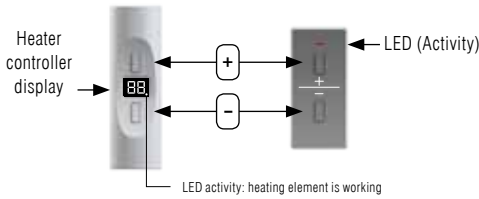

LED activity: heating element is working

Heater controller

Remote controller

Heater controller




Turn ON the controller



Remote controller

Push for pairing button using allen key to activate the controller

Locate suitable place to mount the clip

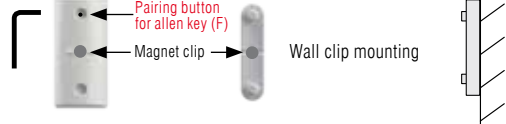

1



Run the controller

Hold upper button for 3 seconds

Switch off the controller

Hold lower button for 5 seconds

40°C
Standard heating temperature

2



10°C - 65°C*
Select temperature

* maximum temperature can be different according to the producer settings

3

TURBO mode activation



TURBO mode activation - max heating temperature

Hold button for 3 seconds







b1-b2-b3 Max heating temperature, **selection for 1/2/3 hours**

b0 Off selection


Heater controller and remote controller pairing

If you bought a remote controller together with H+heater **you do not need to pair it!**


Prepare remote controller + allen key for use

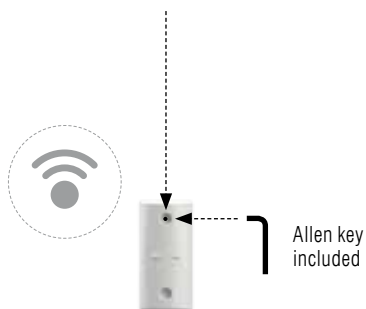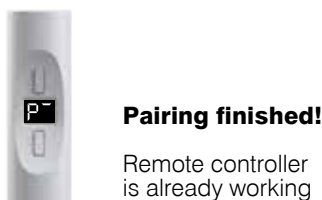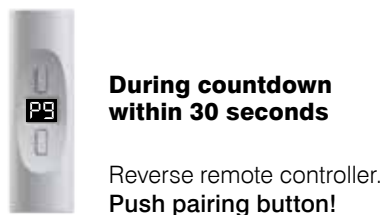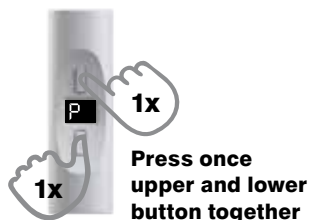

Settings water or ambient temperature

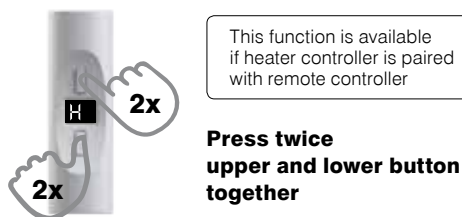

This function is available if heater controller is paired with remote controller

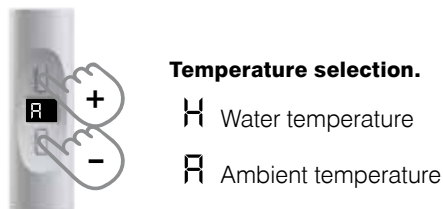


Errors

- E1 Lack of water (or wrong choice of heating element to the heater)
- E2 Damaged heating element (or no power circuit)
- E3 No communication to the remote controller if paired

DO NOT DISCONNECT!

controller from heating element, when connected to the power supply




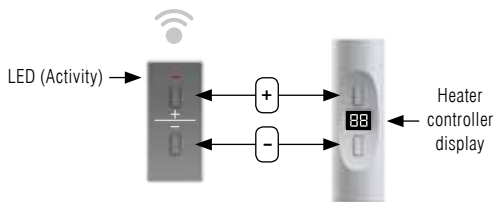

Remote controller Heater controller

Remote controller

Push for pairing button using allen key to activate the controller

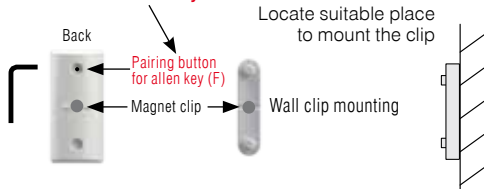

Heater controller



Turn ON the controller







1

START: Heater controller and remote controller pairing

If you bought a remote controller together with H+heater you do not need to pair it!

Prepare remote controller + allen key for use

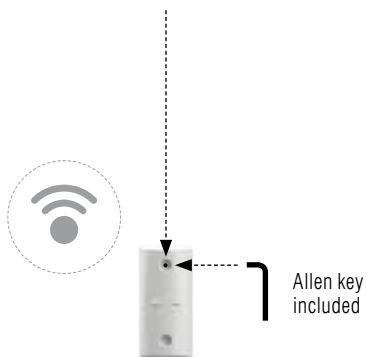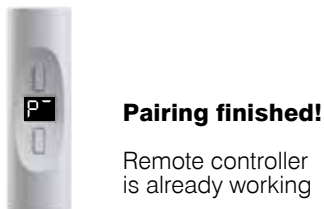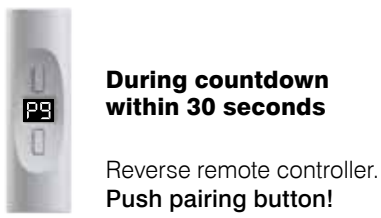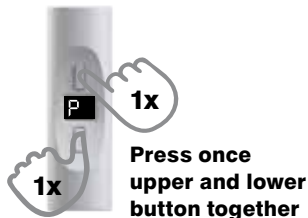



Run the heater controller via remote controller

Hold upper button for 3 seconds


5 sec

Switch off the controller via remote controller

Hold lower button for 5 seconds

40°C

Standard heating temperature

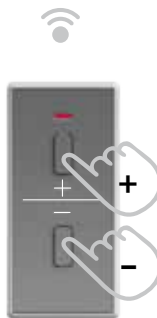

10°C - 65°C*

Select temperature

TURBO mode activation



TURBO mode activation - max heating temperature

Hold button for 3 seconds



b1-b2-b3

Max heating temperature, selection for 1/2/3 hours

b0

Off selection

Settings water or ambient temperature



Press twice upper and lower button together



Temperature selection.

H Water temperature 10-65°C*

R Ambient temperature 10-30°C

The remote is a temperature sensor



* maximum temperature can be different according to the producer settings